



Schieben Sie die Sortentülle (oder den Splashguard EK 652) über den Schutzüberzug.



Während des Aufschiebens die Sortenhülle drehen, bis sie in den Schutzüberzug einrastet.




Achten Sie auf den korrekten Einbau der Sortenhülle:

- 1) Richtige Position des Schutzüberzugs, das Zapfventilgehäuse muss sichtbar sein.
- 2) Die Sortenhülle muss in den Schutzüberzug einrasten: es darf keine Lücke zwischen den beiden Teilen geben.
- 3) Die Trennnaht der Sortenhülle muss genau eine Linie mit der Trennnaht des Schutzüberzugs bilden.

Assembly of Product Sleeve EK 043



Push Product Sleeve (or Splashguard EK 652) over the Scuffguard.

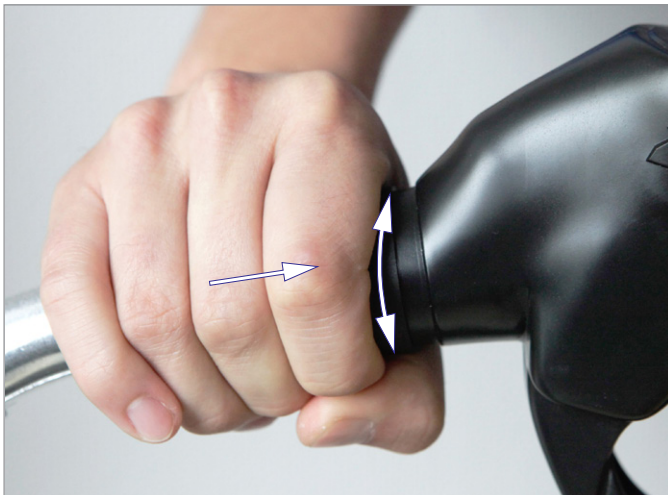

While pushing the Product Sleeve, turn it until it snaps in properly onto the Scuffguard.



Pay attention to the correct fit of the Product Sleeve:

- 1) *Correct position of the Scuffguard, the nozzle body has to be visible.*
- 2) *The Product Sleeve has to snap into the Scuffguard: no gap between these two parts allowed.*
- 3) *The parting line on the Product Sleeve has to be in line with the parting line of the Scuffguard.*